

Handy Stock Prod



Handy Stock Prod

Operation Instructions

Read the following instructions carefully before using the this prodder.



CAUTION!

High Voltage! Danger of injury and material damage!

Do not touch the electrodes, Even with the batteries removed, a voltage impulse can still be produced (residual charge).

Never use this prod on humans,

Keep out of the reach of children.

Before cleaning the device, remove the batteries and allow any residual charge to dissipate.

Do not operate the device in liquids.

Do not use the device to strike the animals.

Correct use

The device is used as a droving implement for adult cattle and pigs.

Any other use, including use on humans, shall be deemed as not being compliant with the intended use.

Animal protection regulations applicable in each country must also be observed

Function

The device generates high voltage and delivers an electric shock when the electrodes touch the animal.

Setup

1. On/off switch
2. Housing
3. Operating button
4. Electrodes



Operation

1. Before using for the first time, remove the red safety strap in the battery compartment.
2. Switch the device on (ON).
3. Press the operating button (3) and at the same time press the electrodes (4) onto the animal's hind leg muscles.
The device will deliver an electric shock. An audible signal will be heard for the duration of the shock.
4. Take the device off the animal.
5. Switch the device off (OFF).
6. if the device is not going to be used for at least two weeks, remove the batteries in order prevent premature discharging.

Changing the batteries

1. Loosen the screw on the underside of the device and fold up the cover.
2. remove the batteries and insert the new batteries into the housing as shown in the diagram.
3. Secure the cover again with the screw.

Cleaning

CAUTION! High voltage!

Before cleaning the device, remove the batteries and allow any residual charge to dissipate. The device can be cleaned with conventional cleaning agent and water.

Disposal



The device must not be disposed of in household waste. Under the terms of the EU directive on the disposal of old electrical and electronic equipment, the device can be taken to local authority-run refuse sites or recycling plants free of charge, or returned to dealers who offer a returns service. Correct disposal protects the environment and prevents any possible harmful impacts on humans and the environment.

⚡ Portable

⚡ Lightweight

⚡ No Residual Shock

⚡ Ergonomical Handle

⚡ Work on Wet Animal

⚡ With 4 Alkaline
AA Batteries

⚡ On/off Switch to
Prevent Accidental
Discharge



XSHOCKER™
Farmates Electronics Inc.
www.farmates.com