# Instructions

## Operating Instruction

Electric Shock on Animal

- \* Press the ①Main ON/OFF Switch at the bottom of handle
- \* Press the ②Shock Trigger Button (at the behind of the big button)
- \* Make contact with animals with the two electrodes
- \* Release ②Shock Trigger Button
- \* Press again the "①Main ON/OFF switch at the bottom of handle to turn off the Prod

Torch Light

- \* Press the "①Main ON/OFF Switch' at the bottom of handle
- \* Press the "3 Torch Light ON/OFF Switch at the front of the big button

## **Battery Pack**

- \* The battery pack is rechargeable and removable.
- \* The battery can be recharged with the charger provided directly.
- \* Battery Pack Cover is sealed for waterproofing, No need to remove the battery pack unless it dose not work or expired.
- \* Draw the "4 Hook on the bottom of Battery Pack, pull out the Battery Pack if necessary.

#### Handle Unit

The Handle is sealed with soft rubber, it dose work and won't shock the finger of user even if it is wet. But it can not be washed by immersing in water. Inside The big button. The ③Torch Light ON/OFF Switch in front, and ②Shock Trigger Button at behind.

### Shaft

The Shaft/wand is flexible.

- \* Connect with the handle unit
- \* Align the two metal prongs of shaft end with the two metals inside the head of handle
- \* Screw and tighten the ⑦collar nut to the handle unit

## **Charging The Battery**

- \* Make the charger plugged in.
- \* Insert the DC pin into the charging hole of battery pack. The red LED light will be on.
- \* After 2 to 4 hours, the green right will be on. The battery is full charged.

#### **WARNINGS**

- \* This Electric Livestock Prod Designed to use on large livestock only (cattle and hogs). minimum use is encouraged. Do not hit animals with shaft or handle.
- \* Keep away from children.
- \* Do not use on humans.
- \* Do not use near flammable material. Use in ventillated areas.
- \* Always turn off the ①Main ON/OFF Switch after use.
- \* Always use a long enough shaft to maintain a safe working distance between you and your livestock.

#### WARRANTY!!!

Cattle prod handles have a warranty for 1 year from date of purchase. The warranty includes workmanship and material malfunction but does not include physical damaged or tampered. Shaft and batteries are not covered under warranty.

### Troubleshoot



Charger

#8208

#### The handle unit is failed

Press the ①Main ON/OFF Switch, then press the ②Shock Trigger Button, No electric shock spark when make contact the electrodes to a metal, and also no current noise emits from the handle unit, Press the ③Torch Light ON/OFF Switch, it lights, The Generator inside the handle unit is failed, contact your dealer for replacing a handle unit

#### The battery pack is failed

Press the ①Main ON/OFF Switch, then press the ②Shock Trigger Button, No electric shock spark when touch the electrodes to a metal, and also no current noise emits from the handle unit, Press the ③Torch Light ON/OFF Switch, the torchlight dose not work, the battery pack is failed, contact your dealer for replacing a battery pack.

#### The Shaft is failed

The electric shock spark is strong when connecting the two metal inside the handle head with a screwdriver. And There is no shock spark or the spark is weak when connecting with the shaft. The Shaft is failed. Contact your dealer for replacing a shaft.



